



## Welcome to mamira

Our child safety locks are designed to help curious little explorers discover the world safely – giving parents greater peace of mind at home.



### Why this set includes two types of invisible locks:

**Magnetic locks provide the highest level of child safety**, as the magnetic key can be stored out of children's reach.

For cabinets or drawers that are used frequently – such as a trash cabinet or diaper drawer – **quicker access can make everyday life more convenient**.

That's why this set also includes **2 Quick-Locks**, which can be opened without using the magnetic key.

**Magnetic Locks: Maximum Security**  
**Quick-Locks: Maximum Convenience**



Questions or feedback? We'd love to hear from you.


[support@mamira-home.de](mailto:support@mamira-home.de)

Your mamira-Team

## Instruction Manual

### mamira Invisible Child Safety Locks for Cabinets and Drawers

#### 1. Package Contents

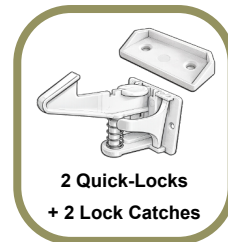

#### 2. Important Safety Information

##### WARNING:

- Contains magnets. Swallowed magnets can cause serious internal injuries.
- If magnets are swallowed, seek immediate medical attention.
- Small parts may present a choking hazard.

##### CAUTION:

- Keep the magnetic keys and all small parts out of the reach of children.
- This product is not a toy. It must not be used or operated by children.
- This product is not a substitute for adult supervision.
- This device helps restrict young children's access to cabinets and drawers but cannot guarantee complete safety.
- Install the product only as described in this instruction manual.
- Regularly check that all parts are securely attached and functioning properly.
- Do not continue using the product if any components are damaged or have become loose.
- For indoor household use only.

#### 3. Intended Use

The mamira invisible child safety lock is intended to help secure cabinet doors and drawers in indoor household environments. This product is designed to help restrict young children's access to the contents of cabinets and drawers.

The product is intended for installation on smooth, clean surfaces, including: plastic (e.g. ABS, acrylic, polycarbonate), glass, metal, and coated, painted, or veneered wood surfaces.

The maximum door or drawer front thickness is 42 mm (1.65 in).

When the locking mechanism is engaged, the maximum gap between the door/front and the cabinet frame must not exceed 30 mm (1.18 in).



#### 4. Installation

We want to make installation as easy as possible for you. You can also follow the installation process step by step in our video.



##### 4.1 Preparing for Installation

**Mounting Position:** The locks can be installed on the side, top, or bottom of cabinet doors and drawers. For the best locking performance, install the lock as far away from the hinge as possible. For convenient everyday use, we recommend mounting it near the handle.

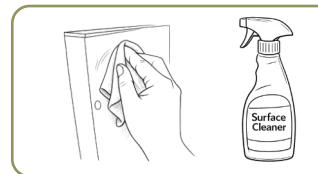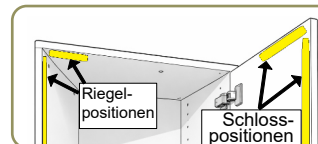


The mounting surface must be clean, dry, and free of dust and grease. **Clean the designated adhesive surfaces** using a suitable grease-removing cleaner. Then wipe the surfaces dry with the included microfiber cloth.

#### 5. Installing the Magnetic Lock

##### 5.1 Attach Catch to the Installation Template


Slide one lock catch into the guide rails of the installation template.

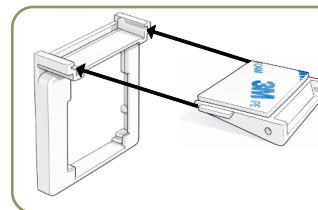

##### 5.2 Attach Lock to the Installation Template



Unlock the lock by pressing the small lever upward (1).

Place the lock onto the installation template. Make sure the long side of the lock is facing toward the lock catch (2).

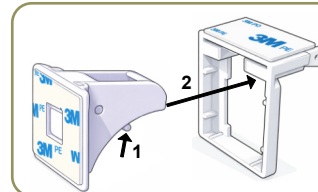

#### 5.3 Determine the Required Installation Method based on your cabinet type

If the cabinet door is flush with the cabinet frame (Type B), the lock catch must be mounted further back. Therefore, first determine how your cabinet door or drawer closes:

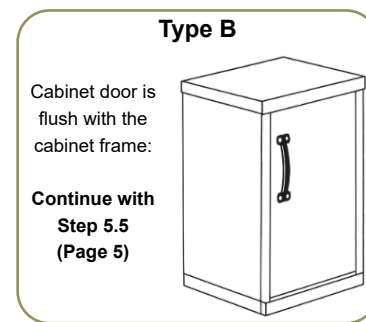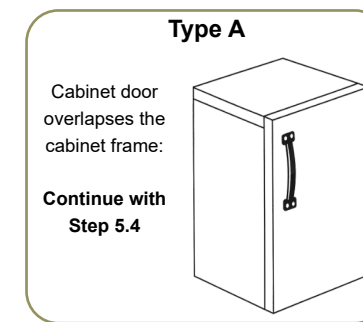

#### 5.4 Type A – Installation for Overlapping Doors (Measuring guide is not required)

Remove the protective film from the lock catch.




For installation on the top panel, see Figure (1).

For installation on the side panel, see Figure (2).

Press the adhesive side of the lock catch firmly onto the desired position, ensuring that the **installation template is perfectly flush with the cabinet frame**.

**Press the lock catch firmly in place for 30 seconds** to ensure a strong bond.

**Continue with Step 5.6 on Page 5.**

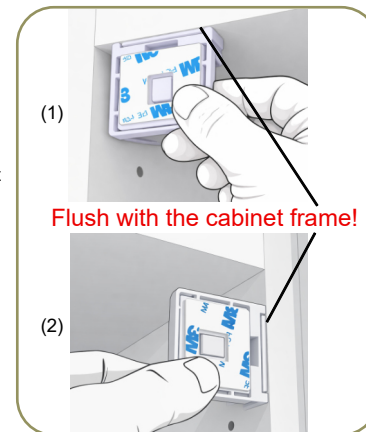

5.5 Type B – Installation for flush cabinet doors (Measuring guide required)

For Type B cabinets, the lock catch must be mounted further inside the cabinet by the same distance that the door sits recessed within the cabinet. To determine this distance, measure the door thickness and subtract 1 mm to obtain the offset distance. Example:

Door thickness = 19 mm (measured)

→ Offset distance = 19 mm - 1 mm = 18 mm

Insert the measuring guide into the opening between the lock and the installation template (1). If you have already completed Step 4.1, remove the protective film from the lock catch (2).

Avoid touching the adhesive surface.

Position the lock catch according to the offset distance determined in Step 5.5.

The offset distance is measured from the front edge of the cabinet frame to the lock catch.

The required distance can be read directly from the inserted measuring guide.

Make sure the lock catch is aligned parallel to the front edge of the cabinet frame.

Press the lock catch firmly in place for 30 seconds, then remove the measuring guide.






5.6 Type A and Type B: Final Installation Steps for the Magnetic Lock

Remove the protective film from the magnetic lock.

Close the cabinet door or drawer and apply light pressure for 5 seconds.

Open the cabinet door or drawer again.

The magnetic lock is now adhered to the correct position on the inside of the door or drawer.

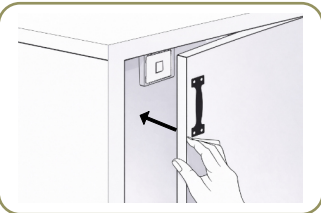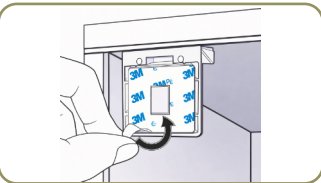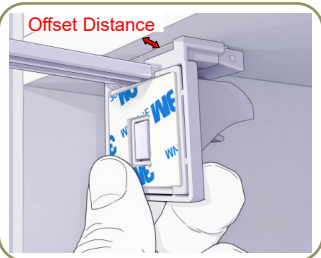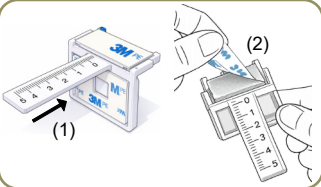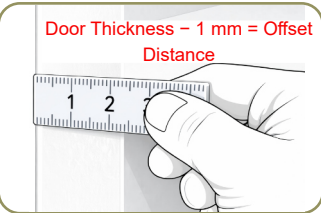

Press the magnetic lock firmly against the door for 30 seconds to ensure a strong bond.

Carefully slide the installation template forward to remove it from the lock catch.

Unlock the magnetic lock by pressing the small lever downward. The adhesive now requires 24 hours to cure and reach its full bonding strength. During this time, do not operate the lock or the lock catch (do not pull on the door or unlock the lock with the magnetic key).





If you wish to keep the lock permanently unlocked (for example, when your child is not at home), move the lever upward.

To open the cabinet door, hold the magnetic key against the area on the outside of the door where the magnetic lock is installed.

At the same time, pull the door open.

5.6 Optional Accessories & Tips

- 1) Use the included lock symbol stickers to mark the position on the outside of the cabinet door where the magnetic key should be placed to unlock the magnetic lock.
- 2) Use the included key holder to store the magnetic key in a convenient location.
- 3) If you install the magnetic lock or the lock catch on a surface with limited adhesion (for example, a textured surface), you can secure it using the included screws.

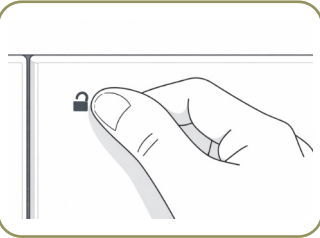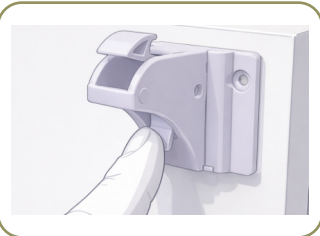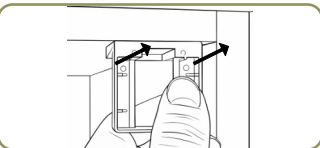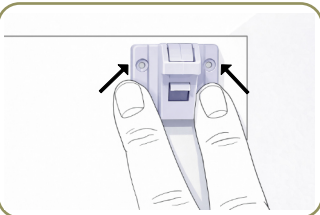

6. Installing the Quick-Lock (Spring Lock)

Prepare the installation of the Quick-Locks as described in Step 4.1. Proper cleaning of the mounting surfaces is essential for a strong bond.

6.1 Determine the Mounting Position for the Quick-Lock

For general recommendations regarding the mounting position, refer to Section 4.1.

First, make sure that the permanent unlock lever is not engaged.

Determine the correct mounting position for the Quick-Lock. Hold the Quick-Lock in the desired position. When closing the cabinet door or drawer, the tip of the latch should lightly touch the surface where the lock catch will later be installed. This ensures that the latch engages correctly with the lock catch after installation.




Mark the mounting position of the Quick-Lock with a pencil.

Remove the protective film from the Quick-Lock and attach it to the marked position.

Press the Quick-Lock firmly against the door for 30 seconds to ensure a strong bond.

Positioning the Lock Catch: Close the cabinet door or drawer and mark the point on the cabinet frame where the tip of the latch touches the surface using a pencil.

This mark indicates the center position where the lock catch should be installed.

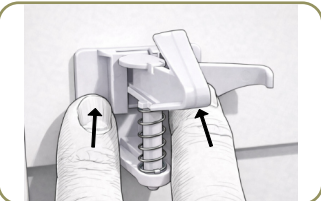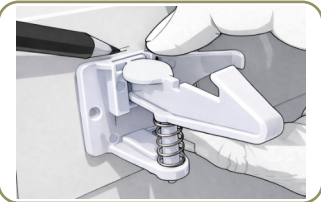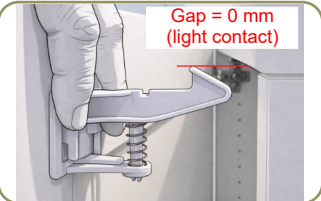

The raised side of the lock catch must face toward the inside of the cabinet after installation (the flat side of the latch therefore faces toward the front).

Remove the protective film from the lock catch. Avoid touching the adhesive surface.

Attach the lock catch to the cabinet frame so that the marked position is centered on the lock catch and the front edge of the lock catch is flush with the front edge of the cabinet frame. Press the lock catch firmly against the cabinet frame for 30 seconds.

The adhesive must now cure for 24 hours.

Unlocking: Open the cabinet door slightly and press the latch downward.

If you install the Quick-Lock or the lock catch on a surface with limited adhesion (for example, a textured surface), you can secure it using the included screws.

6.2 Permanent Unlock Function for the Quick-Lock

To activate the permanent unlock function ("always unlocked") of the Quick-Lock, press the latch downward (against the spring) and slide the small tab sideways into the designated notch in the latch.

To deactivate the permanent unlock function, slide the tab back out.

7. Tips regarding removing the locks – Magnetic Lock & Quick-Lock

The locks and lock catches can be removed most easily by warming the adhesive pads with a hair dryer and then pulling them off firmly.

Any remaining adhesive residue can be removed using a suitable adhesive remover.

